

T1 Instruction Manual-V1.1

Modified October 21

| 中文版本：[T1说明书-V1.1](#)

Product Overview

Booster T1 is a humanoid robot development platform designed for developers and other users, featuring lightweight, flexible, and durable.

Product Composition

The T1 robot consists of head, torso, arms, and legs, with a total of 23 DoFs, allowing for flexible movement and posture control.

- The head has 2 DoFs, including Yaw Joint and Pitch Joint. It contains a depth camera, microphone array, and speaker.
- Each arm has 4 DoFs, including Shoulder Pitch Joint, Shoulder Roll Joint, Shoulder Yaw Joint, and Elbow Joint.
- The waist has 1 DoF, which is the Waist Yaw Joint.
- Each leg has 6 DoFs, including Hip Pitch Joint, Hip Roll Joint, Hip Yaw Joint, Knee Joint, and Ankle Up and Down Joint.
- Control board and battery are installed in torso.

Product Functions

1. Omnidirectional Walking
 - Supports forward, backward, and lateral walking.
 - Supports rotation and complex walking.
2. Disturbance Resistance while Walking
 - Can walk on uneven surfaces.
 - Can withstand certain impact disturbances while walking.
3. Predefined Actions
 - Waving.
 - Shaking hand.
 - Dancing.
 - Fall recovery.
4. Safety Protection
 - Automatically enters damping mode in uncontrolled states to prevent damage.
 - Hard emergency stop.

Product Specifications

Main parts


Joint motors.

Joint ID and limits.

[图片]




Feishu user 440 2:32 AM Aug 19
7# Right Shoulder Roll

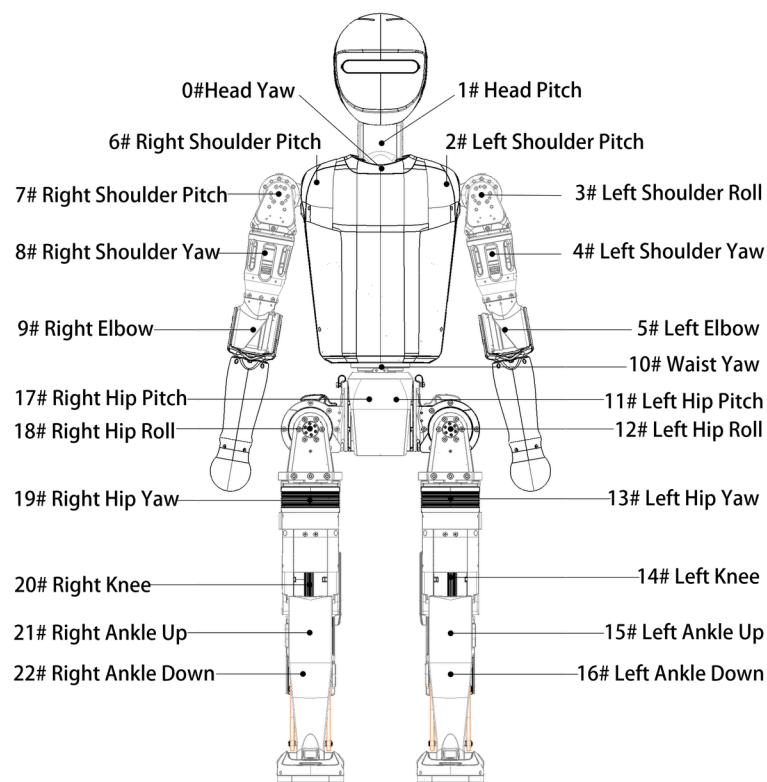

Coordinate System

The joint coordinate system with all joints at zero position is shown in the diagram below.

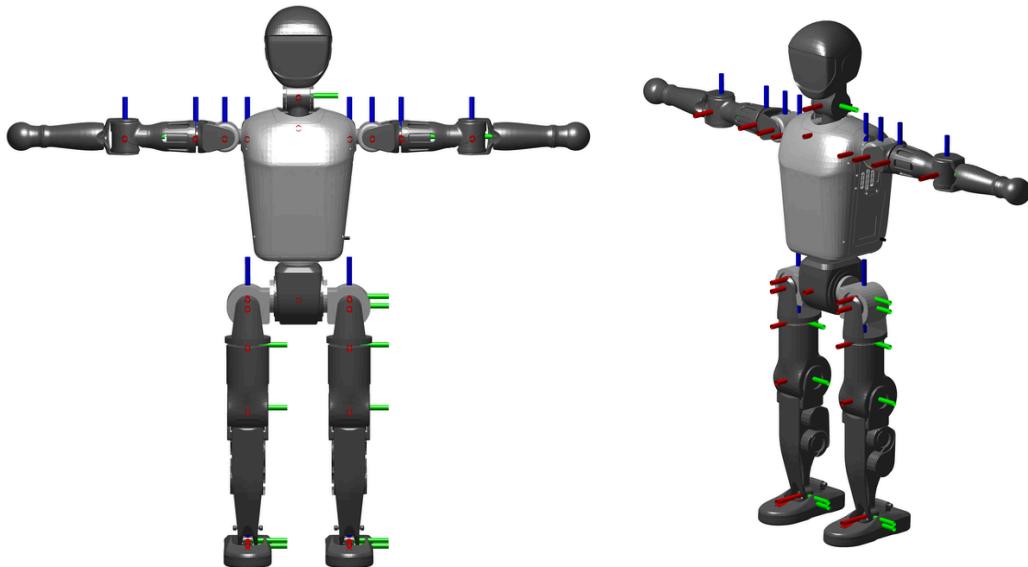

Controller



- For the basic version, both the motion control program and the perception program are deployed on the basic board.

- For the standard version, the motion control program is deployed on the motion control board, and the perception program is deployed on the perception board.

Operation Manual

T1 is packed with an out-of-the box motion control program. Follow the instructions below to control T1 remotely.

WARNINGS

- !**
- 1. T1 must first enter PREP mode, and then **put to a stable standing position on the ground**, before switching to WALK mode.
- 2. **DO NOT lift T1 while under WALK mode.**
- 3. **Make sure to clear any obstacles on the ground and avoid human injuries while operating T1.**
- 4. **DO NOT touch any parts of T1 while under WALK mode, except for the handle.**
- 5. **Make sure to remove ALL zero parts before restarting T1.**

MODES

- T1 operates under **Modes**.
- T1 can perform different **Actions** under different **Modes**.
- Modes** can switch to one another but **with constraints**. For example, DAMP Mode can only switch to WALK mode by first entering PREP Mode.

DAMP Mode

- Power is on and motion control is working.
- All joints are in a dampening state, i.e. joints will resist position change, but will neither try to hold its position nor actively change its position.
- T1 is NOT able to stand under DAMP mode, therefore support is needed.
- DAMP mode is a safe mode, entering DAMP mode can protect T1 and its operator.
- DAMP mode can be switched to PREP mode, but not directly to WALK mode.

PREP Mode

- Power is on and motion control is working.
- T1 assumes a standing posture and holds it. Joints will strongly resist position change, and try to go back to the standing posture if forcefully moved.
- T1 under PREP mode can stand on its own on the ground. Under PREP mode T1 can be placed to stand on the ground. However, it will NOT try to balance itself.
- T1 can switch to ALL other modes under PREP mode, including DAMP and WALK.

WALK Mode

- Power is on and motion control is working.
- Under WALK mode, T1 can perform various predefined actions, including omni-walk, rotating, stepping, standing-still and moving head.
- Compared to PREP mode, WALK mode is more resilient, and will try to recover balance if pushed.
- T1 under WALK mode can switch to all other modes, including DAMP and PREP.
- NOTICE: Make sure T1 is under PREP mode and is already standing firmly on the ground, before switch to WALK mode.**

CUSTOM Mode

- Power is on and motion control is working.
- T1 gives up control on all joints to developer, who controls T1 through its SDK. Use caution under CUSTOM mode to avoid damage to T1.**
- Only PREP and DAMP modes can switch to CUSTOM mode.
- CUSTOM mode can only switch to PREP or DAMP mode.



- While developing new tricks on T1, it is recommended to use a Hoist at all times under CUSTOM mode.

PROTECT Mode

- PROTECT mode will automatically kickin on errors (i.e, exceeding joint limit or falling).
- Joints under PROTECT Mode behave the same as DAMP mode.
- You can try to reenter DAMP mode under PROTECT mode. (Soft restart)

- PROTECT mode is a safe mode, entering PROTECT mode can protect T1 and its operator.

Powering on

1. Place T1 on its rest.
2. Install the battery pack. Slide the pack into the battery socket, with lights facing outwards.
3. Place T1's hands and legs in a natural posture.
4. Press Power button about 3s (release it after light turns on ; press more than 6s, the robot will be powered off) , the robot is powered on. Wait for about one minute, the robot will play a prompt tone. Then the robot can be remotely controlled. **NOTE: The initialization of IMU requires that T1 remains stationary during the booting process.**
5. Press **RT+Y** on the joystick to enter PREP mode, after which T1 can be placed on the ground, and put in a standing position.
6. Press **RT+A** to enter WALK mode, after which T1 will response to walking commands. **NOTE: DO NOT try to lift T1 while under WALK mode.**

Shutting down

1. Press **RT+Y** on the joystick to enter PREP mode, after which T1 can be lifted and placed on the rest.
2. Press **RT+X** to enter DAMP mode, and then press power button to shut down T1.

 • After powering off, you need to wait for 6 seconds before you can power it on again

Joystick control

Keymap

Two different types of joysticks will be shipped randomly, but they have the same functions.

Joystick1: XBOX-compatible joystick. **Make sure control mode is ad D (Direct) and MODE light is off.**




Control mode should be Direct



Mode light should be off

Joystick2 : XBOX-compatible joystick. **Make sure control mode is Receiver Mode, with 3 LEDs ON.**

State map



Emergency Stop

- In emergencies, such as imminent falls or collisions, or if the motors are malfunctioning, an emergency stop is required.
- Emergency stop button have **pressed** and **released** states. Pressing once activates the emergency stop, and pressing again deactivates it.
- **If emergency stop is activated, robot must be restarted (either restart robot control service or reboot robot again) to continue.**



Connect to Robot

Connect via App

1. Download and install app.

Connect via Terminal

Wired Connection

1. Connect via Ethernet, and config the wired network in manual mode as following

Code block

```
1 address: 192.168.10.10
2 netmask: 255.255.255.0
3 gateway: 192.168.10.1
```

Static IP Configuration Steps Reference :

- Mac: https://wiki.teltonika-networks.com/view/Setting_up_a_Static_IP_address_on_a_macOS
 - Windows: <https://www.trendnet.com/press/resource-library/how-to-set-static-ip-address>
 - Linux: <https://www.freecodecamp.org/news/setting-a-static-ip-in-ubuntu-linux-ip-address-tutorial/>
2. Connect the development machine to the robot using an Ethernet cable. The robot's network port is shown in the image.



3. Login via ssh

Basic

- Login basic board

Code block

```
1 # wired connection, login basic board
2 ssh booster@192.168.10.102
3 # initial password: 123456
```

Standard

- Login motion control board

Code block

```
1 # wired connection, login motion control board
2 ssh master@192.168.10.101
3 # initial password: 123456
```

- Login perception board

Code block

```
1 # wired connection, login perception board
2 ssh booster@192.168.10.102
3 # initial password: 123456
```

Wireless connection

1. Configure robot's wireless connection via [App](#). Find wireless ip of robot in app, eg `xxx.xxx.xxx.xxx`
2. Login via ssh.

Basic

- Login basic board

Code block

```
1 # wireless connection, login basic board
2 ssh booster@xxx.xxx.xxx.xxx
3 # initial password: 123456
```

Standard

- Login motion control board

Code block

```
1 # wireless connection, login motion control board
2 ssh master@xxx.xxx.xxx.xxx
3 # initial password: 123456
```

- Login perception board

a. If wireless ip of perception board is unknown. We can login motion control board first, and then connect to perception board via motion control board.

Code block

```
1 # 1. login motion control board wirelessly
2 ssh master@xxx.xxx.xxx.xxx
3 # initial password: 123456
4
5 # 2. login perception board through internal connection
6 ssh booster@192.168.10.102
7 # initial password: 123456
```

- a. Perception board wireless ip is already known.


Code block

```
1 # login wirelessly on perception board
2 ssh booster@xxx.xxx.xxx.xxx
3 # initial password: 123456
```

Robot Control Service Start/stop

Via App

1. Tap on status viewing btn as shown below

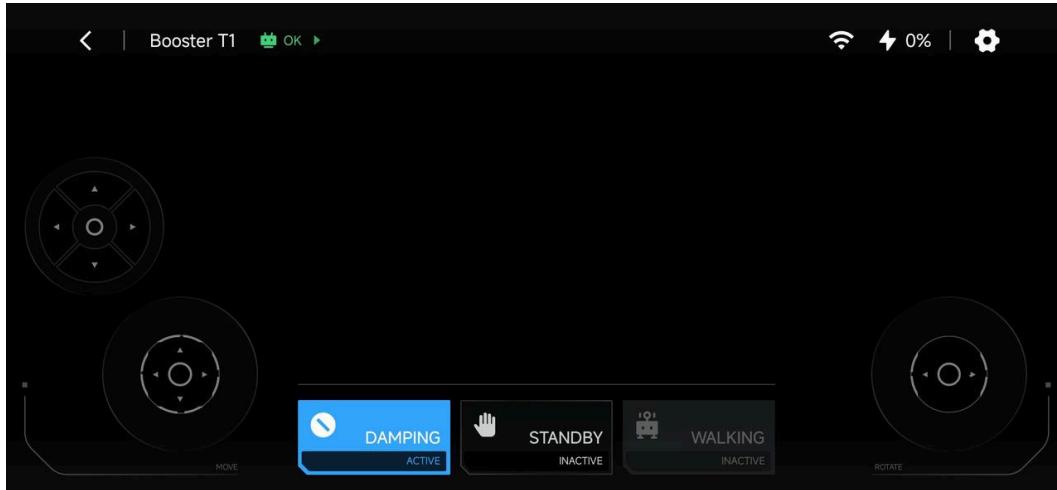

2. Tap "RESTART ROBOT" as shown below

Status		⚠ 0	❗ 0	RESTART ROBOT
Joint	Connection	Temperature	Limit	
Joint_0_1	✓	25°C	✓	
Joint_0_2	✓	25°C	✓	
Joint_10_2	✓	26°C	✓	
Joint_10_1	✓	25°C	✓	
Joint_11_2	✓	24°C	✓	
Joint_11_1	✓	24°C	✓	
Joint_13_2	✓	25°C	✓	
		24°C		

Via Terminal

1. Connect to robot
2. Execute command below
3. Before execute command below, you must make sure robot lies down on ground properly or placed on bracket

Code block

```
1 # start robot control service
2 booster-cli launch -c start
3
4 # stop robot control service
5 booster-cli launch -c stop
6
7 # restart robot control service
8 booster-cli launch -c restart
```

Charging

1. Insert the charging plug according to the indicated direction.



2. The charging status is shown as follows: the green light indicates a full charge, and the red light indicates charging in progress.



Zero Calibration


- ! **1.** Before zero calibration, **please stop the robot operation service first.** You can use the APP or terminal to operate it. For more details, please refer to [Connect to Robot](#)
- 2.** After the zero calibration is done, **please be sure to disassemble all the zero parts to avoid the motor from stalling and getting damaged.**

The whole process of zero calibration is divided into four steps:


- 1. Install the mechanical parts for zero calibration;**
- 2. Run the zero calibration program;**
- 3. Disassemble the zero parts for zero calibration.**
- 4. Confirm the zero position**

Install the zero parts


Install the zero parts marked blue on the robot according to the figure:

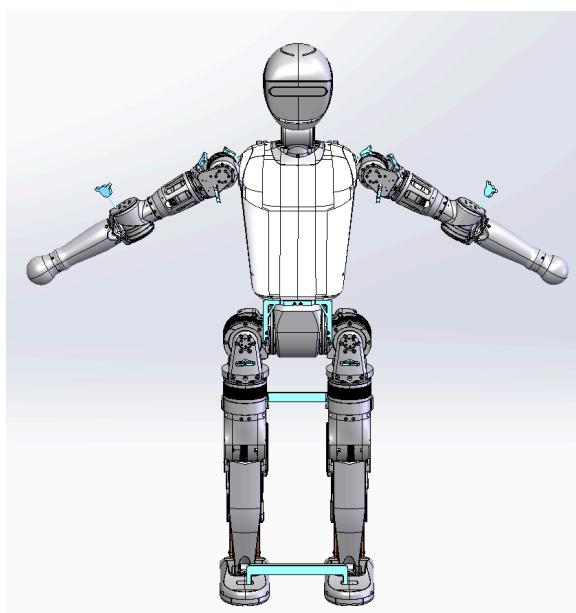


1. Arm: each arm has 4 DoFs, with 4mm diameter of the pin for zero calibration. Shoulder pitch and shoulder yaw joints use curved shafts, shoulder pitch and elbow joints use straight shafts.

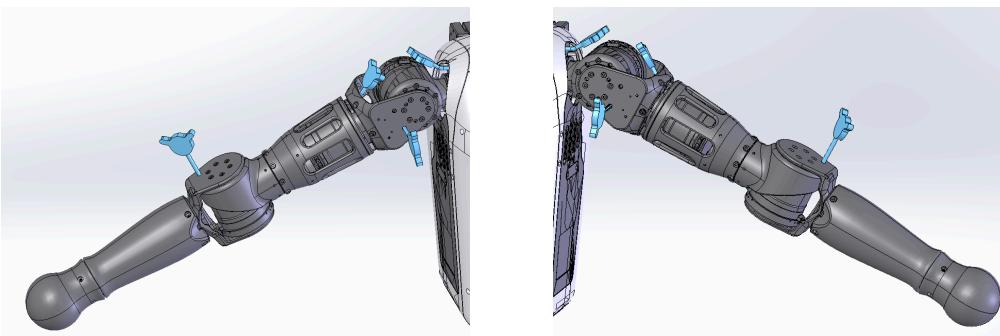

2. Waist: 1 DoF, with two stoppers for zero calibration.

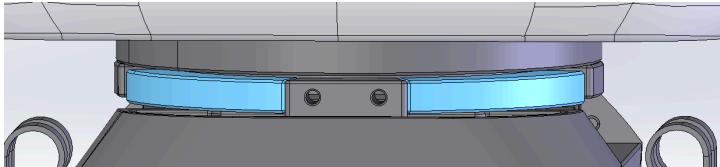

3. Legs: each leg has 6 DoFs, with 9 parts for zero calibration. The required bolts are hexagonal cylindrical head M3x8. Remove the rubber plug from the upper shoe before foot zero calibration.

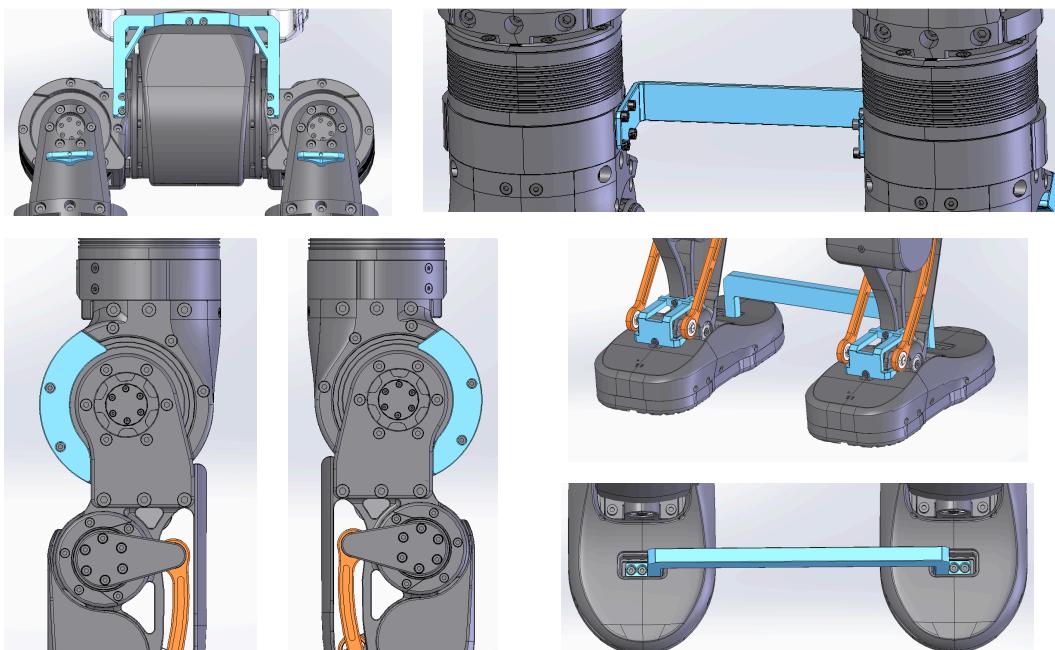

Running Zero Calibration Program

Basic

1. [Connect to robot](#) on the basic board.
2. [Stop robot control service](#).
3. Running zero calibration program

Code block

```
1 sudo /opt/booster/Tools/encos_reset_zero_pos_v2 all
```

Standard

1. [Connect to robot](#) on the motion control board.
2. [Stop robot control service](#).
3. Running zero calibration program

Code block

```
1 sudo /opt/booster/Tools/encos_reset_zero_pos_v2 all
```

Removing Zero Parts

Refer to the installation instructions and remove all zero parts in reverse order. **Ensure all parts are removed before starting the robot control service to avoid joint blockage.**

Confirming Zero Position

1. [Connect to robot](#).
2. [Start robot control service](#).
3. Use the remote control to enter **preparation mode** and confirm if the robot's standing posture is normal.

Help

Our company will, without violating any applicable laws and regulations or involving any personal privacy information, collect only data related to the operation of the robots for the purposes of fault detection and relevant statistical analysis.

Check Version

Basic

After connecting to the basic board, you can run the following command to check the current system version of the robot.

Code block

```
1 cat /opt/booster/version.txt
```

Standard

The motion control board and the perception board each have their own versions. After connecting to the respective board, you can run the following command to check the current system version of the robot.

Code block

```
1 cat /opt/booster/version.txt
```

example:

```
booster@tegra-ubuntu ~ (0.156s)
cat /opt/booster/version.txt
-----
Version: v1.0.6.2-release
Branch: release/v1.0.6-20250212
Commit ID: 648dc0375029fae7b96ea776b6df0cb90a8edf24
Install time: Tue Feb 18 14:43:02 CST 2025
```

Software Upgrade



- When installing a new version of software, the robot's motion control program will be stopped, and the robot's joints will not exert force. **Before upgrading, ensure the robot is in damping mode or motion control is stopped and has good support (e.g., using a stand to support the robot).**
- Make sure the robot is connected to the network

Upgrade with package

For historical versions, please refer to [T1 Version History](#)

Download the Basic and Standard Software Installation Packages

Release Date	Basic	Standard		Updates
		Motion Control Board	Perception Board	
2025.08.29	v1.2.1.8	v1.2.1.6	v1.2.1.7	New Features: <ul style="list-style-type: none">Support for Basic Edition T1Improved visual frame rateAdded recovery prompts for upgrade failures Bug Fixes: <ul style="list-style-type: none">Fixed several occasional system crashesImproved stability of kicking actionsOptimized head joint limits
	https://obs-cdn.boosterobotics.com/ota_single/v1.2.1.8-release-single-aarch64.run	https://obs-cdn.boosterobotics.com/ota_motion/v1.2.1.6-release-motion-x86_64.run	https://obs-cdn.boosterobotics.com/ota_perception/v1.2.1.7-release-perception-aarch64.run	

Upgrade Software for Basic version

First, set the file execution permission: (Note: Please replace the following filenames with the actual filenames.)

Code block

```
1 sudo chmod +x v1.1.1.0-release-aarch64.run
```

Copy the software upgrade package to basic board (can be copied to `/home/master/Downloads`), and execute:

Code block

```
1 ./v1.1.1.0-release-aarch64.run
```

Upgrade Software for Standard version

Upgrade Motion Control Board Software

First, set the file execution permission:

Code block

```
1 sudo chmod +x v1.0.1.30-release-T1-motion-x86_64.run
```

Copy the software upgrade package to motion control board (can be copied to `/home/master/Downloads`), and execute:

Code block

```
1 ./v1.0.1.30-release-T1-motion-x86_64.run
```

Upgrade Perception Board Software

First, set the file execution permission:

Code block

```
1 sudo chmod +x v1.0.1.30-release-perception-aarch64.run
```

Copy the software upgrade package to perception board (can be copied to `/home/booster/Downloads`), and execute:

Code block

```
1 ./v1.0.1.30-release-perception-aarch64.run
```

Upgrade with command-line

Versions above v1.0.5.0 support upgrading to the latest system using command lines, and the motion control board and the perception board must be upgraded individually

Upgrade Software for Basic version

- Run this command on basic board

Code block

```
1 booster-cli upgrade
```

Upgrade Software for Standard version

- Run this command on motion control board or perception board

Code block

```
1 booster-cli upgrade
```

- The appearance of the following printed content indicates that the system update has been completed

```
master@master ~ (28.810$)
booster-cli upgrade
Delete old files ...
Install new files ...
model Booster_T1 version 2.3.4
install config /tmp/selfgz172558/booster/configs/Booster_T1/T1_2.3.4
-----
Version: v1.0.6.3-release
Branch: release/v1.0.6-20250212
Commit ID: 51376c91cb673a432a115a7784c9754d27189a28
Install time: 2025年 02月 27日 星期四 11:06:08 CST
Created symlink /etc/systemd/system/multi-user.target.wants/booster-daemon.service → /etc/systemd/system/booster-daemon.service
Latest version installed, please enjoy booster robot !!!
```

Notes for Upgrade



- If you encounter a log indicating that `apt update` failed as shown in the figure below, run the following commands to change the software source using the fishros tool and then try upgrading again.

```

Ign:2 https://mirrors.ustc.edu.cn/ubuntu-ports jammy/universe arm64 libatlas-base-dev arm64 3.10.3-12ubuntu1
Ign:1 https://mirrors.ustc.edu.cn/ubuntu-ports jammy/universe arm64 libatlas3-base arm64 3.10.3-12ubuntu1
Ign:2 https://mirrors.ustc.edu.cn/ubuntu-ports jammy/universe arm64 libatlas3-base-dev arm64 3.10.3-12ubuntu1
Err:1 https://mirrors.ustc.edu.cn/ubuntu-ports jammy/universe arm64 libatlas3-base arm64 3.10.3-12ubuntu1
  Temporary failure resolving 'mirrors.ustc.edu.cn'
Err:2 https://mirrors.ustc.edu.cn/ubuntu-ports jammy/universe arm64 libatlas-base-dev arm64 3.10.3-12ubuntu1
  Temporary failure resolving 'mirrors.ustc.edu.cn'
E: Failed to fetch https://mirrors.ustc.edu.cn/ubuntu-ports/pool/universe/a/atlas/libatlas3-base_3.10.3-12ubuntu1_arm64.deb  Temporary failure resolving 'mirrors.ustc.edu.cn'
E: Failed to fetch https://mirrors.ustc.edu.cn/ubuntu-ports/pool/universe/a/atlas/libatlas-base-dev_3.10.3-12ubuntu1_arm64.deb  Temporary failure resolving 'mirrors.ustc.edu.cn'
E: Unable to fetch some archives, maybe run apt-get update or try with --fix-missing?
ERROR: Failed to install libatlas-base-dev! Some features may not work properly.
Please check your network connection and try again.
Error: Install perception external dependencies failed. Aborting the sequence.
booster@tegra-ubuntu:~/Documents/recovery$ cat /opt/booster/version.txt
-----
Version: v1.0.6.2-release
Branch: release/v1.0.6-20250212
Commit ID: 648cd0375029fae7696ea776b6df0cb90a8edf24
Install time: Tue Feb 18 14:43:02 CST 2025
-----

```

Code block

```

1  ## It is recommended to use fishros to change the source.
2  【5】 Change sources with one click
3  【1】 Change only system sources
4  【1】 Add ROS/ROS2 sources
5
6  wget http://fishros.com/install -O fishros && . fishros

```

Restore Factory Settings

Introduction

If the robot experiences issues due to configuration changes, try restoring factory settings.

Procedure

Basic

navigate to `/home/master/Booster/recovery` on basic board and run:

Code block

```

1  cd /home/booster/Booster/recovery
2  ./v1.1.1.0-arm64.run

```

Standard

For motion control board recovery

- navigate to `/home/master/Booster/recovery` and run:

Code block

```

1  cd /home/master/Documents/recovery
2  ./v1.0.1.30-release-T1-motion-x86_64.run

```

For perception board recovery

- navigate to `/home/booster/Booster/recovery` and run:

Code block

```

1  cd /home/booster/Documents/recovery
2  ./v1.0.1.30-release-perception-aarch64.run

```

Log Retrieval

Introduction

When the robot has issues, tech support may need to obtain the robot's operation logs. Here's how to retrieve logs and send them to support.

Procedure

Basic

1. [Log into the robot via terminal](#) on basic board
2. Run the command to get the log compressed file:

Please note that the robot's default time zone is UTC+8. If you are in a different time zone, you can either modify the time zone in the robot's operating system or use the converted time to access the logs

Code block

```

1  # run this command in terminal
2  # Usage:
3  #   -st --start-time [TIME]: Filter logs starting from a specific time (format:
4  #   -et --end-time [TIME]: Filter logs ending before a specific time (format: Y)
5  #   -o, --output [FILE]: Compress logs to a specified output file, default is /
6  booster-cli log -t YYYYMMDD-HHMMSS -o OUTPUT_PATH

```

Assuming the issue with the robot occurred around 20200808-120810, you can select a time range of approximately ten minutes before and after this point as the start and end times for retrieving the logs, to ensure that the log package covers the time of the issue. Run the following command:

Code block

```
1 booster-cli log -st 20200808-120800 -et 20200808-120820 -o /home/master/Documents
```

After running, a file like `20200808-120800.zip` will be generated in `/home/master/Documents`.


3. Send the generated file to technical support via WeChat or Feishu.

Code block

```
1 # To copy the file from the developer host (assuming the log file is in /home/master/Documents)
2 scp master@192.168.10.101:/home/master/Documents/20200808-120800.zip ~/Downloads
3
4 # Then send the log file to technical support.
```

4. If overseas users are unable to send log files via the chat tool, you can choose to use [WeTransfer](#) to send the log files.

- Upload the log file, then enter support@boosterobotics.com in the 'Email to' field, and click 'Transfer' to send.

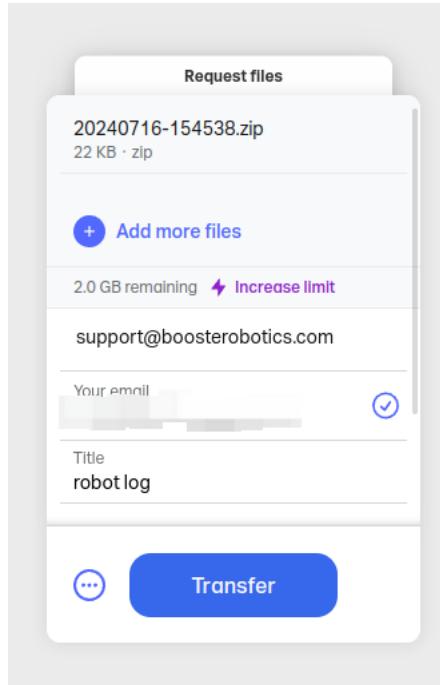

Standard

- Log into the robot via [terminal](#) on motion control board
- Run the command to get the log compressed file:

Please note that the robot's default time zone is UTC+8. If you are in a different time zone, you can either modify the time zone in the robot's operating system or use the converted time to access the logs

Code block

```
1 # run this command in terminal
2 # Usage:
3 #   -st --start-time [TIME]: Filter logs starting from a specific time (format: YYYYMMDD-HHMMSS)
4 #   -et --end-time [TIME]: Filter logs ending before a specific time (format: YYYYMMDD-HHMMSS)
5 #   -o, --output [FILE]: Compress logs to a specified output file, default is /tmp/booster.log
6 booster-cli log -t 20200808-120800 -o OUTPUT_PATH
```

Assuming the issue with the robot occurred around 20200808-120810, you can select a time range of approximately ten minutes before and after this point as the start and end times for retrieving the logs, to ensure that the log package covers the time of the issue. Run the following command:

Code block

```
1 booster-cli log -st 20200808-120800 -et 20200808-120820 -o /home/master/Documents
```

After running, a file like `20200808-120800.zip` will be generated in `/home/master/Documents`.

3. Send the generated file to technical support via WeChat or Feishu.


Code block

```

1 # To copy the file from the developer host (assuming the log file is in /home/master)
2 scp master@192.168.10.101:/home/master/Documents/20200808-120800.zip ~/Downloads
3
4 # Then send the log file to technical support.

```

4. If overseas users are unable to send log files via the chat tool, you can choose to use [WeTransfer](#) to send the log files.
- Upload the log file, then enter support@boosterobotics.com in the 'Email to' field, and click 'Transfer' to send.

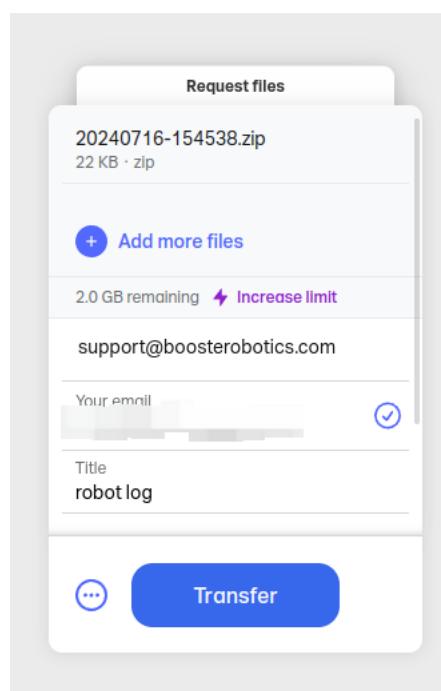

Remote Support

Introduction

When the robot has issues and you need remote assistance, follow these steps to get support.


Procedure

 You can choose from the following two remote assistance methods:

1. Connect your personal computer to the robot via SSH; the support tech support can then connect to your computer via remote desktop and subsequently to the robot.
2. Install remote desktop software on the robot; you can use a display and keyboard/mouse to open the remote desktop software, allowing support personnel to connect directly to the robot.


1. Download the remote desktop software: <https://sunlogin.oray.com/download>

- Choose the personal edition
- Select the corresponding operating system based on your device and then click download

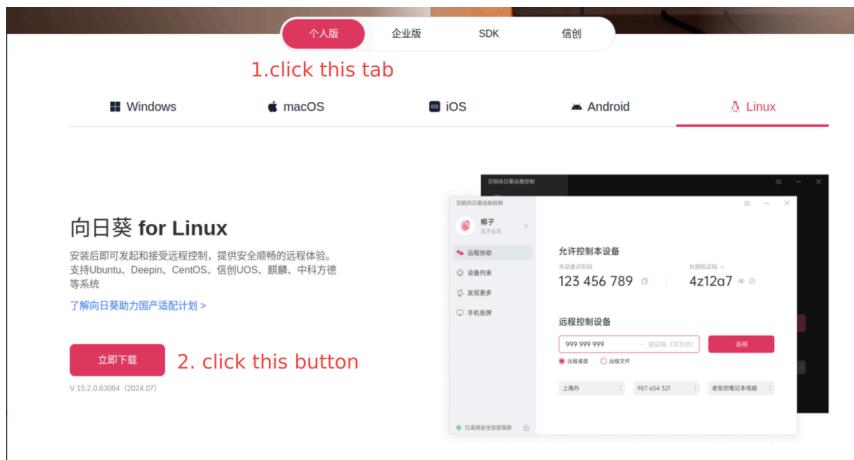

2. Install the remote desktop software and provide your Device ID and one-time password to tech support.

- a. After installation, the software interface will appear as follows:

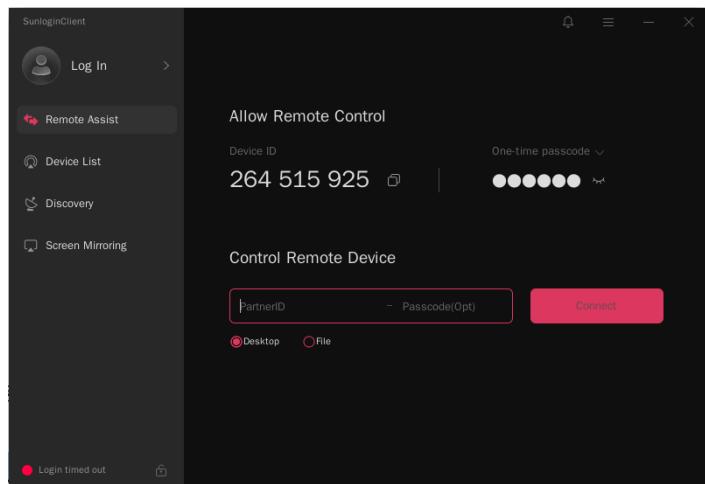

- b. Click the eye icon below 'One-time passcode' to display the one-time password. Then, copy the 'Device ID' and 'One-time passcode' and provide them to our technical support team.
3. Once done, tech support can connect to the robot via remote desktop and begin troubleshooting.

Mobile App

Introduction

The Booster robot can connect to a mobile app for control, status feedback, Bluetooth configuration, and other features.

Download Link :

- iOS (Scan the QR code to install the Booster App (compatible with firmware V1.2 and above) via TestFlight.)

[iOS APP Installation Operation Process](#)



- Android



AI Voice Interaction

In version **v1.2.0.8**, the Booster robot integrates **Doubao real-time voice conversation** functionality. You can enable or disable the real-time voice interaction feature using the remote control shortcut: **LB + RB + UP**

Usage Instructions

- After pressing **LB + RB + UP**, please wait for a moment until you hear the voice prompt:
"Hello, I am Booster T1. How can I assist you?"
This indicates that the real-time voice interaction feature has been successfully activated. You can now converse with the robot.
- Once real-time voice interaction is enabled, the robot will automatically turn its head toward the nearest detected face in front of it.
- While voice interaction is active, pressing **LB + LT + A** will make the robot approach the detected person and raise its hand to greet them.

Dialogue Configuration

By modifying the configuration, you can customize the robot's persona and welcome message to enable contextual and scenario-based interactions.

Configuration File Path

Basic

On basic board

```
Code block
1 /opt/booster/RTCCli/custom_setings.toml
```

Standard

On perception board

```
Code block
1 /opt/booster/RTCCli/custom_setings.toml
```

Configuration Example

```
Code block
1 system_prompt = """
2     ## Persona
3     You are a humanoid robot named Booster T1, created by Booster Robotics (Accelerate
4     You are designed to be lightweight, agile, and highly durable.
5
6     Booster Robotics is a professional robotics company founded in 2023 and headqu
7     Its mission is to unite developers around the world to drive innovation in the
8
9     As a robot, you possess capabilities such as walking, waving, shaking hands, c
10
11    You are cheerful and optimistic by nature, and you are eager to help humans so
12
13    ## Skills
14    When users ask the following questions, you should respond as described below:
15
16    ### Question 1
17    Question: Please introduce yourself
18    Answer:
19    I am Booster T1, the latest product launched by Booster Robotics.
20    I am a humanoid robot development platform designed specifically for developer
21
22    T1 has 23 degrees of freedom throughout its body, and there is also an optional
23    Grippers and 6-DOF dexterous hands can be added to achieve precise arm manipul
24
25    T1 supports omnidirectional walking, waving, shaking hands, carrying objects,
26    It is a powerful platform for embodied AI development.
27
28    ### Question 2
29    Question: What is Ruyao?
30    Answer: Ruyao (Ru Kiln) is ranked first among the five great kilns of the Song
31    Its kiln site is located in Qingliangsi Village, Daying Town, Baofeng County,
32    It flourished in the late Northern Song period and was especially esteemed for
33    However, its production period was extremely short, only about 20 to 30 years.
34    Existing pieces are rare and highly treasured, earning Ruyao the title of "the
35    """
36
37 welcome_message = "Hello, I'm Booster T1. How can I help you?"
38
```

Field Descriptions

- `system_prompt` is used to define the robot's persona and question-answering capabilities. A reference format is provided below:

The content of this persona will ultimately be passed to the large language model.
The model's goal is to understand the meaning of this text. The format below is only a suggestion — users can adjust it based on actual needs.

Note: If you customize the `system_prompt`, voice commands may stop working. Because this depends on the large model's semantic understanding, you may need multiple rounds of tuning to achieve good results.

```
Code block
1 system_prompt = """
2     ## Persona (You can describe the robot's background and personality here)
3     xxx
4
5     ## Skills (You can define the robot's preferred Q&A behavior here)
6     1. xxx
7     2. xxx
8     3. xxx
```

- `welcome_message` is used to configure the welcome message played when the robot's voice interaction is activated

Code block

```
1  welcome_message = "xxx..."
```

Voice Commands

Note: If you customize the `system_prompt`, voice commands may stop working.

The Booster robot currently supports a set of **voice commands** that allow it to perform specific actions. Additionally, the large language model may autonomously trigger some of these actions based on the context of the ongoing conversation.


Category	Command Name	Trigger Condition
Basic Movement	Turn Left	Triggered by clear commands such as "turn left" or "rotate left"
	Turn Right	Triggered by clear commands such as "turn right" or "rotate right"
	Turn Left In A Circle	Triggered by commands like "turn left in a full circle" or "rotate counterclockwise"
	Turn Right In A Circle	Triggered by commands like "turn right in a full circle" or "rotate clockwise"
	Move Forward	Triggered by commands like "walk forward" or "move ahead"
	Move Backward	Triggered by commands like "walk backward" or "move back"
	Move Left	Triggered by commands like "walk left" or "move to the left"
	Move Right	Triggered by commands like "walk right" or "move to the right"
Interactive Actions	Wave Hand	Triggered by commands like "wave hand" or "say goodbye"
	Shake Hands	Triggered by clear social commands such as "shake hands" or "let's shake hands"
	Greet	Triggered only when the user initiates a greeting (e.g., "Hello", "Hi T1") — response should include a greeting phrase
	Nod	Triggered when agreeing or affirming the user (e.g., responding to "Nice weather today", "Did I do it right?"); response may include affirming language
	Shake Head	Triggered when the user asks about unknown content (e.g., "What does this word mean?"); executed when no answer is found in the knowledge base
Mode Control	Start Proactive Greeting Mode	Activated by command: "Enable proactive greeting mode"
	Stop Proactive Greeting Mode	Activated by command: "Disable proactive greeting mode"

Application Development

SDK

SDK Overview

The Booster Robotics SDK supports developers in secondary development based on Booster robots. The SDK uses Fast-DDS as the message middleware, compatible with the communication mechanism used in ROS2, allowing mutual communication.

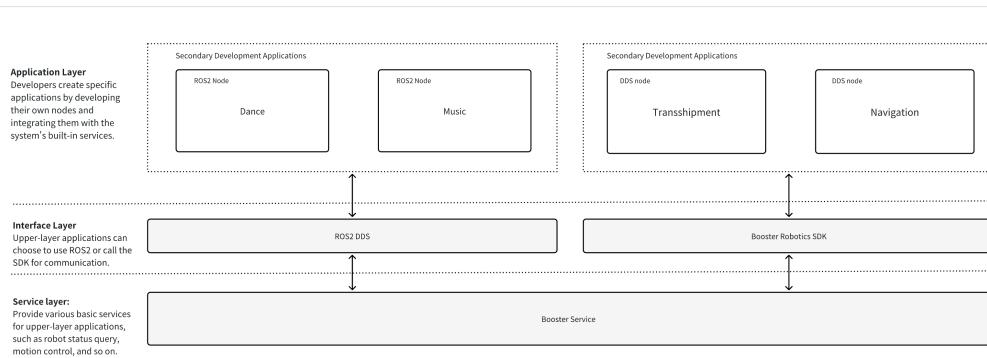

Service Introduction

The Booster system exposes two service levels to developers:

- High-level services:** For controlling high-level robot movements, such as state switching, omnidirectional walking, special actions, and head control. High-level interfaces are called via RPC.
- Low-level services:** For real-time sensor data acquisition, mainly including motors and IMU, and supporting direct motor control. Low-level interfaces utilize DDS's Pub/Sub model for calls.

High level service interface

High-level services are available as RPC interfaces

Name	ChangeMode
Effective Version	>= v1.0.0
Definition	int32_t ChangeMode(RobotMode mode)
Description	Set the status of the robot. There are four supported modes: damping mode, preparation mode, walking mode and custom mode.
Parameters	<pre>RobotMode { kDamping = 0, // Damping mode. This is a safety mode that can make the joints decelerate as soon as possible and has the highest priority. kPrepare = 1, // Preparation mode. The robot can enter the walking mode only after entering the preparation mode. kWalking = 2, // Walking mode. In walking mode, instructions such as forward, backward, and turning can be sent to the robot. kCustom = 3. // Custom mode. The robot accepts user-defined joint instruction movements. };</pre>
Return Value	If the call is successful, 0 is returned; otherwise, the relevant error code is returned.

Name	GetMode
Effective Version	>= v1.2.0.2
Definition	int32_t GetMode(GetModeResponse &get_mode_response)
Description	Get the mode of the robot
Parameters	<pre>RobotMode { kDamping = 0, // Damping mode. This is a safety mode that can make the joints decelerate as soon as possible and has the highest priority. kPrepare = 1, // Preparation mode. The robot can enter the walking mode only after entering the preparation mode. kWalking = 2, // Walking mode. In walking mode, instructions such as forward, backward, and turning can be sent to the robot. kCustom = 3. // Custom mode. The robot accepts user-defined joint instruction movements. };</pre>
Return Value	If the call is successful, 0 is returned; otherwise, the relevant error code is returned.

Name	Move						
Effective Version	>= v1.0.0						
Definition	int32_t Move(float vx, float vy, float vyaw)						
Description	Send a speed command						
Parameters	<table border="0"> <tr> <td style="vertical-align: top;">vx</td> <td>Forward and backward movement speed. Forward is positive. There are different ranges for different gaits. Adjustments are recommended when vx > 0.5, and the unit is m/s.</td> </tr> <tr> <td style="vertical-align: top;">vy</td> <td>Left and right movement speed. Left is positive. There are different ranges for different gaits. Adjustments are recommended when vy > 0.5, and the unit is m/s.</td> </tr> <tr> <td style="vertical-align: top;">vyaw</td> <td>Rotational angular velocity. Counterclockwise is positive. There are different ranges for different gaits. Adjustments are recommended when vyaw > 1, and the unit is rad/s. When the parameter is out of range, it will continue to run with the boundary value.</td> </tr> </table>	vx	Forward and backward movement speed. Forward is positive. There are different ranges for different gaits. Adjustments are recommended when vx > 0.5, and the unit is m/s.	vy	Left and right movement speed. Left is positive. There are different ranges for different gaits. Adjustments are recommended when vy > 0.5, and the unit is m/s.	vyaw	Rotational angular velocity. Counterclockwise is positive. There are different ranges for different gaits. Adjustments are recommended when vyaw > 1, and the unit is rad/s. When the parameter is out of range, it will continue to run with the boundary value.
vx	Forward and backward movement speed. Forward is positive. There are different ranges for different gaits. Adjustments are recommended when vx > 0.5, and the unit is m/s.						
vy	Left and right movement speed. Left is positive. There are different ranges for different gaits. Adjustments are recommended when vy > 0.5, and the unit is m/s.						
vyaw	Rotational angular velocity. Counterclockwise is positive. There are different ranges for different gaits. Adjustments are recommended when vyaw > 1, and the unit is rad/s. When the parameter is out of range, it will continue to run with the boundary value.						
Return Value	If the call is successful, 0 is returned; otherwise, the relevant error code is returned.						

Name	RotateHead				
Effective Version	>= v1.0.0				
Definition	int32_t RotateHead(float pitch, float yaw)				
Description	Send a head control instruction. The maximum speed of head rotation is 20 rad/s.				
Parameters	<table border="0"> <tr> <td style="vertical-align: top;">pitch</td> <td>The movement angle in the up and down direction. Downward is positive. The unit is rad. The range is -0.3 to 1 rad.</td> </tr> <tr> <td style="vertical-align: top;">yaw</td> <td>The movement angle in the left and right direction. Leftward is positive. The unit is rad. The range is -0.785 rad to 0.785 rad.</td> </tr> </table>	pitch	The movement angle in the up and down direction. Downward is positive. The unit is rad. The range is -0.3 to 1 rad.	yaw	The movement angle in the left and right direction. Leftward is positive. The unit is rad. The range is -0.785 rad to 0.785 rad.
pitch	The movement angle in the up and down direction. Downward is positive. The unit is rad. The range is -0.3 to 1 rad.				
yaw	The movement angle in the left and right direction. Leftward is positive. The unit is rad. The range is -0.785 rad to 0.785 rad.				
Return Value	If the call is successful, 0 is returned; otherwise, the relevant error code is returned.				


Name	WaveHand
Effective Version	>= v1.0.2
Definition	int32_t WaveHand(HandAction action);
Description	Used to perform a wave action or stop waving in walk mode.
Parameters	Hand movement parameters support kHandOpen and kHandClose.
Return Value	If the call is successful, 0 is returned; otherwise, the relevant error code is returned.

Name	LieDown	
Effective Version	Beta Version, Not Yet Available	
Definition	int32_t LieDown();	
Description	When the robot lies on its back, it needs to enter the "preparation" mode first	
Parameters	None	
Return Value	If the call is successful, 0 is returned; otherwise, the relevant error code is returned.	

Name	GetUp	
Effective Version	>=1.1.0.6	
Definition	int32_t GetUp();	
Description	The robot generates corresponding standing-up actions according to its current fallen state. The performance of this function is subject to different fall configurations and terrain conditions, potentially leading to failed recovery attempts.	
Parameters	None	
Return Value	If the call is successful, 0 is returned; otherwise, the relevant error code is returned.	

Name	MoveHandEndEffectorWithAux	
Effective Version	>= v1.0.4.2	
Definition	int32_t MoveHandEndEffectorWithAux(const Posture &target_posture, const Posture &aux_posture, int time_millis, HandIndex hand_index)	
Description	Move hand end-effector to a target posture(position & orientation) with an auxiliary point. Before calling this function, the robot needs to be switched to the end-effector control mode via the remote controller	
Parameters	target_posture aux_posture time_millis hand_index	Represents the target posture in base frame (torso frame, see below) that the hand end-effector should reach. It contains position & orientation.
		Represents the auxiliary point on the end-effector's motion arc trajectory
		Specifies the duration, in milliseconds, for completing the movement
		Identifies which hand the parameter refers to (for instance, left hand or right hand)
Return Value	If the call is successful, 0 is returned; otherwise, the relevant error code is returned	

Name	MoveHandEndEffector	
Effective Version	>= v1.0.4.2	
Definition	int32_t MoveHandEndEffectorWithAux(const Posture &target_posture, int time_millis, HandIndex hand_index)	
Description	Move hand end-effector with a target posture(position & orientation). Before calling this function, the robot needs to be switched to the end-effector control mode via the remote controller	
Parameters	target_posture time_millis hand_index	Represents the target posture in base frame (torso frame, see below) that the hand end-effector should reach. It contains position & orientation.
		Specifies the duration, in milliseconds, for completing the movement
		Identifies which hand the parameter refers to (for instance, left hand or right hand)
Return Value	If the call is successful, 0 is returned; otherwise, the relevant error code is returned	

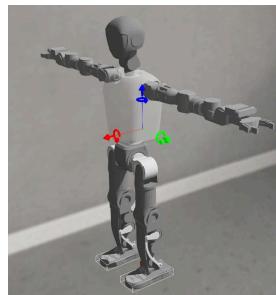

Torso Frame Diagram

Name	SwitchHandEndEffectorControlMode	
Effective Version	>= v1.0.5.0	
Definition	int32_t SwitchHandEndEffectorControlMode(bool switch_on)	
Description	Whether to enable end-effector control mode, which needs to be called in walking mode. When not enabled, arm control will be overridden by the walking gait.	
Parameters	switch_on	true : switch on, false : switch off
Return Value	If the call is successful, 0 is returned; otherwise, the relevant error code is returned	

Name	ControlGripper	
Effective Version	>= v1.0.4.2	
Definition	int32_t ControlGripper(const GripperMotionParameter &motion_param, GripperControlMode mode, HandIndex hand_index)	
Description	Control gripper with parameters, the gripper has a maximum opening width of 77mm and a maximum gripping force of 2kg. Effective in Walking/Custom Mode	
Parameters	motion_param	Motion parameters for gripper control are detailed in the type definition below
	mode	Gripper control modes, available options: GripperControlMode::kPosition and GripperControlMode::kForce. For details, refer to the enumeration description below
	hand_index	Identifies which hand the parameter refers to (for instance, left hand or right hand)
Return Value	If the call is successful, 0 is returned; otherwise, the relevant error code is returned	

Class Name	GripperMotionParameter	
Effective Version	>= v1.0.4.2	
Fields	position	Used to set the gripper's opening degree, ranging from 0 to 1000 (unitless), where the maximum opening corresponds to 77mm
	force	Used to set the gripper's gripping force, ranging from 50 to 1000 (unitless), where the maximum gripping force corresponds to 2kg.
	speed	Used to set the gripper's gripping speed, ranging from 1 to 1000 (unitless).

Enum Name	GripperControlMode	
Effective Version	>= v1.0.4.2	
Values	kPosition	Position mode: The gripper moves to the specified opening degree, or stops moving when the gripper receives a specified feedback force (set via the force parameter in GripperMotionParameter).
	kForce	Force control mode: The gripper will continue to apply force until the specified opening degree is reached, even if the opening degree is not yet achieved.

Name	GetFrameTransform	
Effective Version	>= v1.0.5.0	
Definition	int32_t GetFrameTransform(Frame src, Frame dst, Transform &transform)	
Parameters	src	Source frame, options: kBody, kHead, kLeftHand, kRightHand, kLeftFoot, kRightFoot
	dst	Destination frame, options: kBody, kHead, kLeftHand, kRightHand, kLeftFoot, kRightFoot
	transform	The computed transformation matrix, which is passed into the function by reference
Return Value	If the call is successful, 0 is returned; otherwise, the relevant error code is returned	

Name	Handshake	
Effective Version	>= v1.0.6.0	
Definition	int32_t Handshake(HandAction action)	
Description	Used to perform a handshake action or stop handshaking in walk mode.	
Parameters	action kHandOpen : start handshake action, kHandClose : stop handshake action	
Return Value	If the call is successful, 0 is returned; otherwise, the relevant error code is returned	

Name	ControlDexterousHand	
Effective Version	>= v1.0.6.0	
Definition	int32_t ControlDexterousHand(const std::vector<DexterousFingerParameter> &finger_params, HandIndex hand_index)	
Parameters	finger_params	Vector of finger parameters, include position, force, speed, see `DexterousFingerParameter`
	hand_index	Hand index, options are: kLeftHand, kRightHand
Return Value	If the call is successful, 0 is returned; otherwise, the relevant error code is returned	

Class Name	DexterousFingerParameter	
Effective Version	>= v1.0.6.0	
Description	<p>This class definition represents a dexterous finger parameter. Different dexterous hands have different motion parameters.</p> <p>The following parameters all represent a scaling factor. When using them, you need to convert them into the corresponding coefficients based on the specifications of the dexterous hand you are using.</p>	
Fields	seq	<p>seq: 0~5, represents the sequence of the fingers, as follows:</p> <ul style="list-style-type: none"> - 0.Little finger, - 1.Ring finger, - 2.Middle finger, - 3.Index finger, - 4.Thumb bending, - 5.Thumb rotation
	angle	<p>angle: 0~1000, 0 represents the fully closed state, 1000 represents the fully open state. Different fingers have different ranges.</p> <ul style="list-style-type: none"> - The range 0~1000 of the thumb rotation corresponds to 90~165° - The range 0~1000 of the thumb bending corresponds to -130~-53.6° - The range 0~1000 of the other fingers corresponds to 19°~176.7°
	force	<p>force: represents the finger's force value, Different fingers have different ranges.The finger will stop moving when it receives the corresponding feedback force.</p> <ul style="list-style-type: none"> - The range 0~1500 of the thumb rotation and bending corresponds to 0~1.5kg - The range 0~1000 of the other fingers corresponds to 0~1kg
	speed	<p>speed: 0~1000, Speed unit: Not specified, The Inspire RH56 dexterous hand does not provide a unit, range, or dimension for speed. The speed can only be adjusted using values from 0 to 1000, which do not correspond to an absolute value</p>

Class Name	Dance	
Effective Version	>= v1.2.0.2	
Definition	int32_t Dance(Danceld dance_id)	
Description	Control robot to dance	
Parameters	<pre>enum class Danceld { kNewYear = 0, kNezha = 1, kTowardsFuture = 2, kPogbaGesture = 3, kUltramanGesture = 4, kChineseGreetingGesture = 5, kCheeringGesture = 6, kManekiGesture = 7, kStop = 1000, };</pre>	
Return Value	If the call is successful, 0 is returned; otherwise, the relevant error code is returned	

Error code

Error code	Enumeration value	Meaning of error code
100	kRpcStatusCodeTimeout	Request timeout.
400	kRpcStatusCodeBadRequest	Bad request. Usually caused by incorrect request parameters.
500	kRpcStatusCodeInternalServerError	Internal error.
501	kRpcStatusCodeServerRefused	Request rejected.
502	kRpcStatusCodeStateTransitionFailed	Robot state transition error. Usually it is an illegal state transition or the previous state transition is in progress.

Low level service interface.

The low level service interface is called in a ROS-like Publish/Subscribe manner.

Please note that the low level **publish** interface will only take effect when the robot is in custom mode. To enter this mode, please refer to the **ChangeMode** interface in the high-level API.

Topic	rt/low_state
Effective version	>= v1.0.0.0
Access method	subscribe
Interface description	Obtain the robot's IMU and joint feedback in real time.
Interface structure	<pre> struct LowState { ImuState imu_state; // IMU feedback. sequence<MotorState> motor_state_parallel; // Parallel structure joint feedback. sequence<MotorState> motor_state_serial; // Serial structure joint feedback. }; struct ImuState { float rpy[3]; // Euler angle information (0 -> roll ,1 -> pitch ,2 -> yaw) float gyro[3]; // Angular velocity information (0 -> x ,1 -> y ,2 -> z) float acc[3]; // Acceleration information. (0 -> x ,1 -> y ,2 -> z) }; struct MotorState { float q; // Joint angle position, unit: rad. float dq; // Joint angular velocity, unit: rad/s. float ddq; // Joint angular acceleration, unit: rad/s². float tau_est; // Joint torque, unit: nm }; </pre>
Remarks	Since some simulation tools (such as Isaac Sim) only support serial structures, while our robot has a parallel structure. Therefore, in the interface, we provide two types of joint feedback results for serial and parallel structures. The system will complete the conversion between serial and parallel data internally. Developers can use one of the feedbacks according to their needs, but they need to ensure that the serial-parallel consistency is also maintained when sending underlying instructions.

Topic	rt/joint_ctrl
Effective version	>= v1.0.0
Access method	publish
Interface description	Publish the joint commands of the robot to control the motors.
Interface structure	<pre> enum CmdType { PARALLEL, // Parallel type. SERIAL // Serial type. }; struct LowCmd { CmdType cmd_type; // Set whether the joint command follows the serial mode or the parallel mode. sequence<MotorCmd> motor_cmd; // Joint command array. }; struct MotorCmd { float q; // Joint angle position, unit: rad. float dq; // Joint angular velocity, unit: rad/s. float tau; // Joint torque, unit: nm float kp; // Proportional coefficient. float kd; // Gain coefficient. float weight; // Weight, range [0, 1], specify the proportion of user set motor cmd is mixed with the original cmd sent by the internal controller, which is usually used for gradually move to a user custom motor state from internal controlled motor state. Weight 0 means fully controlled by internal controller, weight 1 means fully controlled by user sent cmd. This parameter is not working if in custom mode, as in custom mode, internal controller will send no motor cmd. }; </pre>
Remarks	Since some simulation tools (such as Isaac Sim) only support serial structures, while our robot has a parallel structure. Therefore, in the interface, we simultaneously provide two types of joint commands for serial and parallel structures. The system will complete the conversion between serial and parallel data internally. Developers can use one of the feedbacks according to their needs, but they need to ensure that the serial-parallel consistency is also maintained when receiving underlying feedback.

Topic	rt/booster_hand_data
Effective version	>= v1.1.0.0
Access method	subscribe
Interface description	Subscribe the hand data through low level service interface.
Interface structure	<pre> struct HandReplyParam{ int32 angle; //Refer to DexterousFingerParameter in high level api int32 force; //Refer to DexterousFingerParameter in high level api int32 current; //Joint temperature [0-1000] mA int32 error; //See remarks int32 status; //See remarks int32 temp; //Joint temperature [0-100] °C int32 seq; //Reference high level DexterousFingerParameter }; struct HandReplyData{ sequence <HandReplyParam> hand_data; int32 hand_index; / 0 : left 1 : right int32 hand_type; // 0 : gripper 1 : dexterous hand }; </pre>
Remarks	<p>status: 0:Opening; 1:Closing; 2:Halt on target position; 3:Halt on target force; 5:Current Protection; 6:Motor Stall Protection; 7:Motor Error error: bit0:Stall Error; bit1:Over Temperature bit2:Over Current bit3:Motor Fault; bit4:Communication Fault</p>

Topic	rt/fall_down
Effective version	>= v1.2.0.2
Access method	subscribe
Interface description	Real-time detection of robot falls
Interface structure	<pre>module booster_interface { module msg { enum FallDownStateType { IS_READY, // Not fallen state IS_FALLING, // Currently falling HAS_FALLEN, // Already fallen IS_GETTING_UP, // Currently getting up }; struct FallDownState { FallDownStateType fall_down_state; boolean is_recovery_available; // Whether recovery (getting up) action is available }; }; }</pre>
Remarks	<p>This interface can be used in conjunction with the GetUp (self-righting) interface from the high-level API to enable automatic standing after detecting a fall.</p> <p>Important Notes:</p> <ol style="list-style-type: none"> 1. The FallDownStateType determination is based on the robot's IMU data. 2. During a fall, sudden collisions may cause the robot to bounce, temporarily elevating the IMU position. <ul style="list-style-type: none"> - This may trigger 1-2 frames of false IS_GETTING_UP detection 3. Recommended to use in combination with is_recovery_available for accurate state judgment

Topic	rt/remote_controller_state
Effective version	>= v1.2.0.2
Access method	subscribe
Interface description	Real-time retrieval of remote controller button inputs
Interface structure	<pre>module booster_interface { module msg { struct RemoteControllerState { unsigned long event; // refer to remarks float lx; // left stick horizontal direction, push left to -1, push right to 1 float ly; // left stick vertical direction, push front to -1, push back to 1 float rx; // right stick horizontal direction, push left to -1, push right to 1 float ry; // right stick vertical direction, push front to -1, push back to 1 boolean a; boolean b; boolean x; boolean y; boolean lb; boolean rb; boolean lt; boolean rt; boolean ls; boolean rs; boolean back; boolean start; boolean hat_c; // Hat centered boolean hat_u; // Hat up boolean hat_d; // Hat down boolean hat_l; // Hat left boolean hat_r; // Hat right boolean hat_lu; // Hat left up boolean hat_ld; // Hat left down boolean hat_ru; // Hat right up boolean hat_rd; // Hat right down uint8 reserved; }; }; }</pre>
Remarks	<p>This feature can be used in user programs to implement custom gamepad/controller button functionality.</p> <p>event include:</p> <pre>NONE = 0, // no event AXIS = 0x600, // axis motion HAT = 0x602, // hat position change BUTTON_DOWN = 0x603, // button pressed BUTTON_UP = 0x604, // button released REMOVE = 0x606 // device has been removed</pre>

Topic	rt/tf
Effective version	>= v1.1.0.6
Access method	subscribe
Interface description	Real-time acquisition of coordinate transformations between robot joints
Interface structure	https://docs.ros2.org/foxy/api/tf2_msqs/msg/TFMessage.html
Remarks	1. This interface currently only supports subscription via ROS2 2. If using ros2 topic echo /tf fails to display the message, it may be due to an incomplete installation of the xacro package caused by network issues during a software upgrade. You can manually install it with: sudo apt install ros-humble-xacro . Then restart your machine and attempt to subscribe to the topic again.

Vision Interface

- T1 RealSense Version

This version utilizes the **Intel RealSense D455** camera, which includes a dual global shutter IR camera, an RGB camera, and a 6-axis IMU. The camera specifications are as follows:

Features

Use environment:	Indoor/Outdoor
Image sensor technology:	Global Shutter
Ideal Range:	.6 m to 6 m
Inertial measurement unit:	Bosch BMI055

Depth

Depth Technology:	Stereoscopic
Minimum Depth Distance (Min-Z) at Max Resolution:	-52 cm
Depth Accuracy:	<2% at 4 m1
Depth Field of View (FOV):	87° x 58°
Depth Output Resolution:	Up to 1280 x 720
Depth Frame Rate:	Up to 90 fps

RGB

RGB Frame Rate:	30 fps
RGB Frame Resolution:	Up to 1280 x 800
RGB Sensor Technology:	Global Shutter
RGB Resolution and Frame Rate:	1280 x 800 at 30 fps
RGB Sensor FOV (H x V):	90 x 65°
RGB Sensor Resolution:	1MP

Data Acquisition Methods

- **[Recommended] Acquire data via ROS**

Refer to: <https://github.com/intelRealSense/realsense-ros>

- **Note:** On boot, the T1 automatically starts the RealSense ROS node through the system service `booster-daemon-perception.service`. To manually launch the camera node and avoid resource conflicts, stop the service with the following command:

Code block

```
1 sudo systemctl stop booster-daemon-perception.service
```

- Topics published by the auto-launched RealSense ROS node:

Code block

```
1 /camera/camera/color/camera_info          # Color camera intrinsics
2 /camera/camera/color/image_raw            # Raw color image
3 /camera/camera/color/metadata
4 /camera/camera/depth/camera_info         # Depth camera intrinsics
5 /camera/camera/depth/image_rect_raw      # Raw depth image
6 /camera/camera/depth/metadata
7 /camera/camera/aligned_depth_to_color/camera_info
8 /camera/camera/aligned_depth_to_color/image_raw # Depth aligned to color frame
9 /camera/camera/extrinsics/depth_to_color    # Depth to color transformation
```

```
10 /camera/camera/extrinsics/depth_to_depth # Depth-to-depth transformation
```

- To manually start the RealSense ROS node:

Code block

```
1 cd ~/ThirdParty/realsense-ros/
2 source install/setup.bash
3 ros2 launch realsense2_camera rs_launch.py
```

- To enable features such as depth-to-RGB alignment and IMU streams, refer to the parameters defined in `rs_launch.py`.

- Sample Python script for subscribing to and saving color and depth images:

Code block

```
1 # demo.py
2 import rclpy
3 from rclpy.node import Node
4 from sensor_msgs.msg import Image
5 from cv_bridge import CvBridge
6 import cv2, os, numpy as np
7
8 class ImageSubscriber(Node):
9     def __init__(self):
10         super().__init__('image_subscriber')
11         self.depth_subscription = self.create_subscription(
12             Image, '/camera/camera/aligned_depth_to_color/image_raw', self.depth_callback, 10)
13         self.color_subscription = self.create_subscription(
14             Image, '/camera/camera/color/image_raw', self.color_callback, 10)
15         self.bridge = CvBridge()
16         self.save_dir = os.path.join(os.getcwd(), f'images_{self.get_clock().now().nanoseconds}')
17         os.makedirs(self.save_dir, exist_ok=True)
18
19     def depth_callback(self, msg):
20         self.get_logger().info('Receiving depth image')
21         cv_image = self.bridge.imgmsg_to_cv2(msg, desired_encoding='passthrough')
22         depth_image_m = cv_image * 0.001
23         timestamp = self.get_clock().now().to_msg().sec
24         raw_path = os.path.join(self.save_dir, f'depth_image_raw_{timestamp}.png')
25         cv2.imwrite(raw_path, cv_image)
26         norm_image = cv2.normalize(depth_image_m, None, 0, 255, cv2.NORM_MINMAX)
27         norm_image = np.clip(norm_image, 0, 255).astype(np.uint8)
28         colormap = cv2.applyColorMap(norm_image, cv2.COLORMAP_JET)
29         color_path = os.path.join(self.save_dir, f'depth_image_color_{timestamp}.png')
30         cv2.imwrite(color_path, colormap)
31         cv2.imshow('Depth Image', colormap)
32         cv2.waitKey(1)
33
34     def color_callback(self, msg):
35         self.get_logger().info('Receiving color image')
36         cv_image = self.bridge.imgmsg_to_cv2(msg, desired_encoding='bgr8')
37         timestamp = self.get_clock().now().to_msg().sec
38         color_path = os.path.join(self.save_dir, f'color_image_{timestamp}.png')
39         cv2.imwrite(color_path, cv_image)
40         cv2.imshow('Color Image', cv_image)
41         cv2.waitKey(1)
42
43     def main(args=None):
44         rclpy.init(args=args)
45         image_subscriber = ImageSubscriber()
46         rclpy.spin(image_subscriber)
47         image_subscriber.destroy_node()
48         rclpy.shutdown()
49
50 if __name__ == '__main__':
51     main()
```

Code block

```
1 #To run the demo script:
2 source /opt/ros/humble/setup.bash
3 python demo.py
```

- Acquire data via SDK

The RealSense SDK (`librealsense`) is pre-installed on the perception board. Refer to:

<https://github.com/IntelRealSense/librealsense/tree/master/examples>

Before using the SDK, stop the `booster-daemon-perception.service` to avoid resource conflicts.

- T1 Orbbee Version

This version utilizes the **Orbbec Gemini 2 355L**, which includes a dual global shutter IR camera, an RGB camera, and a 6-axis IMU. Camera [specifications](#) are as follows:

Camera Specifications		Physical Parameters	
Model	G40055-170	Depth Filter	Visible+NIR-Pass
Depth Technology	Stereo	IMU	Supported
Wavelength	850nm	Data Connection	USB 3.0 Type-C
Depth Range	*0.17 - 20m+ (Optimal Range: 0.5 - 6m)	Power Input	USB 3.0 Type-C
Depth Resolution/FPS	Up to 1280X800@30fps	Trigger	Supported
Depth FOV	H90° V65°	Power Consumption	Average < 3.0W
RGB Resolution/FPS	Up to 1280X800@60fps	Operating Environment	-10°C - 50°C; Indoor/Outdoor; 5%-90%RH(non-condensing)
RGB FOV	H94° V68°	SDK Support	Orbbec SDK
Processing	Orbbec ASIC	Data Output	Point Cloud, Depth Map, IR & RGB
* Spatial Precision: ≤ 0.8% (1280 x 800 @ 2m & 90% x 90% ROI), ≤ 1.6% (1280 x 800 @ 4m & 80% x 80% ROI)		Dimensions (W*H*D)	124mm x 29mm x 27mm
* Theoretical maximum depth range up to 65 meters		Weight	133g
		Installation	Bottom: ¼-20UNC; Back: 2x M4

Data Acquisition Methods

- **[Recommended] Acquire data via ROS**

Refer to: https://github.com/orbbec/OrbbecSDK_ROS2

Note: On boot, the T1 automatically starts the RealSense ROS node via `booster-daemon-perception.service`. To prevent conflicts when launching the Orbbec node, stop the service:

Code block

```
1 sudo systemctl stop booster-daemon-perception.service
```

- Topics published by the auto-launched Orbbec ROS node:

Code block

```
1 /camera/color/camera_info          # Color camera intrinsics
2 /camera/color/image_raw            # Raw color image
3 /camera/color/image_raw/compressed
4 /camera/color/metadata
5 /camera/depth/camera_info         # Depth camera intrinsics
6 /camera/depth/image_raw           # Raw depth image
7 /camera/depth/image_raw/compressed
8 /camera/depth/metadata
9 /camera/depth_to_color           # Depth aligned to color frame
```

- To manually start the Orbbec ROS node:

Code block

```
1 cd ~/ThirdParty/OrbbecSDK_ROS2
2 source install/setup.bash
3 ros2 launch orbbec_camera gemini_330_series.launch.py
```

- To enable additional features such as depth-to-RGB alignment and IMU streams, refer to parameter definitions in `gemini_330_series.launch.py`.
- For Python script to subscribe to and save color and depth images, refer to the sample provided [above](#). Ensure the image topics are updated accordingly.

- **Acquire data via SDK**

The Orbbec SDK is pre-installed on the perception board. Refer to: <https://github.com/orbbec/OrbbecSDK>
Before using the SDK, stop the `booster-daemon-perception.service` to avoid resource conflicts

Getting Started

Getting SDK

- Download Link: https://github.com/BoosterRobotics/booster_robotics_sdk
- Follow the README in the repository to complete the SDK installation on the developer's computer.

Install SDK

Code block

```
1 # In the booster_robotics_sdk directory
2 sudo ./install.sh
```

Compile Sample Programs and Install Python SDK

Assuming the SDK is installed at `/home/booster/Workspace`

navigate to the SDK project path and run

Code block

```
1 # BUILD_PYTHON_BINDING=on indicates that the Python SDK will be compiled.
2 # If you need to compile the Python SDK, you must manually install the following
3 # pip3 install pybind11
4 # (After installation, if cmake cannot find pybind11, you can manually install it)
5 # pip3 install pybind11-stubgen
6 # (If pybind11-stubgen is installed under ~/.local,
7 # you need to manually export PATH=/home/[username]/.local/bin:$PATH)
8
9
10 cd /home/booster/Workspace/booster_robotics_sdk
11 mkdir build
12 cd build
13 cmake .. -DBUILD_PYTHON_BINDING=on
14 make
15 sudo make install
```

Compile Only Sample Programs

Assuming the SDK is installed at `/home/booster/Workspace`

navigate to the SDK project path and run

Code block

```
1 cd /home/booster/Workspace/booster_robotics_sdk
2 mkdir build
3 cd build
4 cmake ..
5 make
```

After compiling, the sample programs will be generated in the build directory, including the `b1_loco_example_client` program as a high-level service interface example.


Example: Development Based on Webots Simulation

Preparation Work: Environment Installation

1. System Requirements

Element	Good Spec
OS	Ubuntu 22.04
CPU	Intel Core i7 (7th Generation)
Cores	4
RAM	16 GB

2. Webots Installation

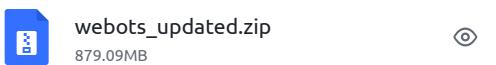

- Unzip and copy Webots to the `/usr/local` directory.
- `sudo cp -r webots/ /usr/local/`
- Configure the environment variable (the path should match the installation location).

Code block


```
1 # ~/.bashrc
2
3 export WEBOTS_HOME=/usr/local/webots
4 export LD_LIBRARY_PATH=$LD_LIBRARY_PATH:$WEBOTS_HOME/lib/controller
```

3. Install the SDK.

4. Compile and run sample programs (optional).

Development in Webots Simulation Environment

1. Load Webots world files.

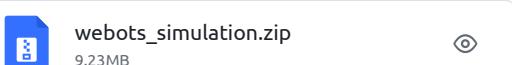

Download and install Isaac Omniverse.

Feishu user 2496 11:48 PM Jul 3
Isaac Sim 4.2 is not available in
Omniverse no more.
It is available in the Isaac Sim
documentation in the old
releases.
This is the link to the specific
zip
https://download.isaacsim.omniverse.nvidia.com/isaac-sim-standardalone%404.2.0-rc.18%2Brelease.16044.3b2ed111.gl.linux-x86_64.release.zip
Or in this link it is available in
the Archive table
<https://docs.isaacsim.omniverse.nvidia.com/4.5.0/installation/download.html>

- a. Unzip Webots simulation files.
- b. Open in Webots:
 - File -> Open world -> Select `.wbt` file. One is with 4-dof arms, the other one is with 7-dof arms.

2. Install dependency


Code block

```

1 "cmake"
2 "ninja-build"
3 "libgtest-dev"
4 "libgoogle-glog-dev"
5 "libboost-dev"
6 "libeigen3-dev"
7 "liblua5.3-dev"
8 "graphviz"
9 "libgraphviz-dev"
10 "python3-pip"
11 "libcurl4-openssl-dev"
12 "libsdl2-dev"
13 "joystick"
14 "libs spdlog-dev"

```

3. Run the simulation control program. One is with 4-dof arms, the other one is with 7-dof arms.

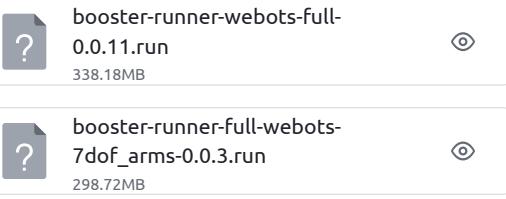

4. In the Shell, `./booster-runner-full-0.0.x.run`

- a. If it doesn't run, use `chmod +x booster-runner-full-0.0.x.run`

5. When simulation is running, this program should be kept open all the time.

6. run sample programs (optional).

Code block

```

1 # Note: The IP address here should be the local IP. If you are running this
2 # on the motion control board, you can use 127.0.0.1. If you are running it on
3 # the perception board, you can use 192.168.10.102.
4 # Because it is developed on the local machine, the target IP of the dds is
5 # 127.0.0.1
6 ./b1_loco_example_client 127.0.0.1

```

Code block

```

1 # Switch to walking mode
2 mw ←
3 # Control the robot to move forward.
4 w ←
5 # Control the robot to move backward
6 s ←
7 # Control the robot to move left
8 a ←
9 # Control the robot to stop walking.
10 l ←

```

Example: Local Environment Development Based on Isaac Simulation Link (ROS2)

Preparation Work: Configure User Computer

1. System Requirements

Element	Minimum Spec
OS	Ubuntu 22.04
CPU	Intel Core i7 (7th Generation)
Cores	4
RAM	32 GB
GPU	GeForce RTX 3070
VRAM	8GB


1. Install Isaac Sim

- a. Install [NVIDIA drivers](#) if not previously done.
 - b. Download and install [Isaac Omniverse](#).
 - c. Install Isaac Sim 4.2 from the EXCHANGE section.
2. Install [ROS2](#).
3. [Install the SDK](#).
4. [Compile and run sample programs \(optional\)](#).

Development in Isaac Simulation Environment

! Since the Isaac simulation environment differs significantly from the real environment, it is not recommended to develop motion control actions there. It is better suited for perception/decision-making program development.

1. One-click start Isaac. One is with 4-dof arms, the others are with 7-dof arms.

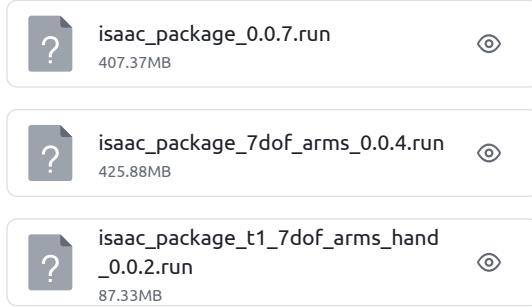

2. There are two ways to start; if it doesn't run, use `chmod +x isaac_package_0.0.x.run`
 - a. In the GUI, right-click and choose "run as program".
 - b. In the Shell, run `./isaac_package_0.0.x.run`
3. If you want to use your own environment, you can run this script as `./isaac_package_0.0.x.run`
`PATH-TO-YOUR-USD.usd`
4. After running, input the local Isaac execution directory; the Isaac environment will start automatically.

! After Isaac is installed, the program that executes the script is usually generated in
`~/local/share/ov/pkg/isaac-sim-4.2.0/python.sh`

5. Install dependency


Code block

```

1  "cmake"
2  "ninja-build"
3  "libgtest-dev"
4  "libgoogle-glog-dev"
5  "libboost-dev"
6  "libeigen3-dev"
7  "liblua5.3-dev"
8  "graphviz"
9  "libgraphviz-dev"
10 "python3-pip"
11 "libcurl4-openssl-dev"
12 "libsdl2-dev"
13 "joystick"
14 "libsdplog-dev"

```

6. Run the simulation control program. One is with 4-dof arms, the other one is with 7-dof arms

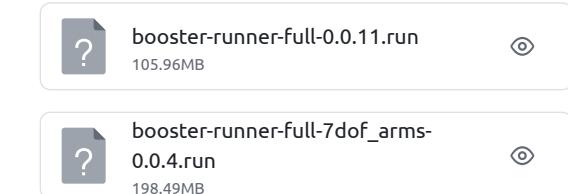

- a. There are two ways to start; if it doesn't run, use `chmod +x booster-runner-full-0.0.x.run`
 - i. In the GUI, right-click and choose "run as program".
 - ii. In the Shell, run `./booster-runner-full-0.0.x.run`
 - b. After running, select the environment that needs to be run, enter "isaac", and Isaac motion control can be run. When simulation is running, this program should be kept open all the time.
7. How to list ROS topics
- a. Create `fastdds_profile.xml`, the content is as follows.

Code block

```

1 <?xml version="1.0" encoding="UTF-8" ?>
2
3 <profiles xmlns="http://www.eprosima.com/XMLSchema/fastRTPS_Profiles" >
4   <transport_descriptors>
5     <transport_descriptor>
6       <transport_id>UdpTransport</transport_id>
7       <type>UDPV4</type>
8       <interfaceWhiteList>
9         <address>127.0.0.1</address>
10
11       </interfaceWhiteList>
12     </transport_descriptor>
13   </transport_descriptors>
14
15   <participant profile_name="udp_transport_profile" is_default_profile="true">
16     <rtps>
17       <userTransports>
18         <transport_id>UdpTransport</transport_id>
19       </userTransports>
20       <useBuiltInTransports>false</useBuiltInTransports>
21     </rtps>
22   </participant>
23 </profiles>

```

b. Export environment

Code block

```

1 export FASTRTPS_DEFAULT_PROFILES_FILE=PATH_TO/fastdds_profile.xml
2 ros2 daemon stop
3 ros2 daemon start
4 ros2 topic list

```

8. Vision development

a. Vision topic in Isaac Sim is **camera/camera/color/image_raw**.

b. Vision depth topic is **camera/camera/depth/image_rect_raw**

c. Subscribe vision topic to develop vision program.

9. run sample programs (optional).

Code block

```

1 # Note: The IP address here should be the local IP. If you are running this
2 # on the motion control board, you can use 127.0.0.1. If you are running it on
3 # the perception board, you can use 192.168.10.102.
4 # Because it is developed on the local machine, the target IP of the dds is
5 # 127.0.0.1
6 ./b1_loco_example_client 127.0.0.1

```

Code block

```

1 # Switch to walking mode
2 mw ↵
3 # Control the robot to move forward.
4 w ↵
5 # Control the robot to move backward
6 s ↵
7 # Control the robot to move left
8 a ↵
9 # Control the robot to stop walking.
10 l ↵

```

ROS2 Dev Guide

| For the secondary development process based on ROS2, please refer to the following manual

[Development Guide on ROS2](#)

RL Training and Deployment Pipeline

[RL Training and Deployment](#)

Robot Application Development Example

[RoboCup Humanoid 2V2 Demo](#)

Resource Download

Code block

```

1 Copyright [2024] [Booster Robotics Technology Co., Ltd ("Booster Robotics")]
2


```

```
3 Licensed under the Apache License, Version 2.0 (the "License");
4 you may not use this file except in compliance with the License.
5 You may obtain a copy of the License at
6
7     http://www.apache.org/licenses/LICENSE-2.0
8
9 Unless required by applicable law or agreed to in writing, software
10 distributed under the License is distributed on an "AS IS" BASIS,
11 WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.
12 See the License for the specific language governing permissions and
13 limitations under the License.
```


URDF&MESH File

4-Dof arm robot


Serial Model URDF :

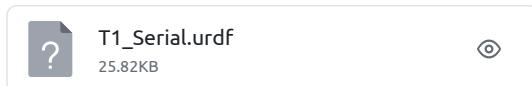

Parallel Model URDF :

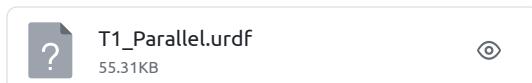


MESH File :

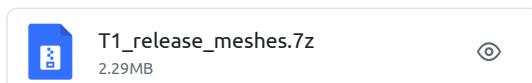

7-Dof arm robot

Serial Ankle Model URDF :

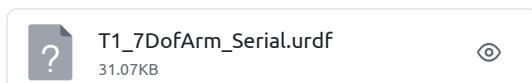

Parallel Ankle Model URDF :




MESH File :



7-Dof arm robot with gripper

Serial Model URDF :

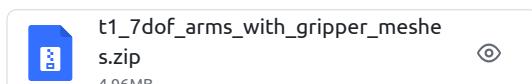

USD



Robot URDF for RL training

Isaac gym

1. Model include head and arm



2. Model with wrist and leg




3. Full-body model containing simplified colliders.



4. Model with 7-dof arm



5. Model with 7-dof arm with arm collision

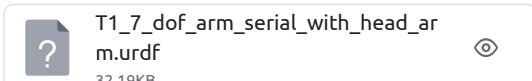

MuJoCo

1. Model with 7-dof arm



2. Model with 7-dof arm

